Ascending Steps

SKU: NW-ASC-##

Recommended Tools:

- ☐ 7/32" Hex Key
- □ 1/4" Hex Key



Slide each **Ascending Step Top** in an **Ascending Step Base**, adjust to desired height and tighten set screws.


Step 2:

Firmly place **Wooden Floor Plate** in desired location on carpet bonded foam.

Step 3:

Attach each Ascending Step Base to the Wooden Ground Plates in desired locations using the included 1-1/4" Hex Drive Screws, one in each of the 4 corners of the Wooden Ground Plate.



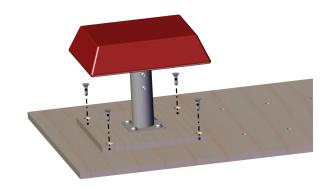

Part Number	Part Description	Quantity
C-PLATE-WGRD186024	Wooden Ground Plate (sold separately)	1
CUSTOM	Ascending Step Top	1
CUSTOM	Ascending Step Base	1
91255A628	1-1/4" Hex Drive Screws	4
1133006	5/16" Flat Washer	4

Need help?

Call 1-800-932-3339 or Email info@gymsupply.com