

### 111 Obstacles Horns

SKU: NWTA-HORNS

#### Required Parts:

- (2) Cross Pipes
- (1) Vertical Pipe
- (2) Kee Crossover Fittings
- (2) Locking Collars

#### Step 1:

Secure a vertical pipe between two cross pipes using Kee Crossover Fittings.

#### Step 2:


Install two Locking Collars above the highest cross pipe to prevent the vertical pipe from slipping.

#### Step 3:

Slightly loosen the Kee Crossover Fittings on the vertical pipe side, so that the vertical pipe spins freely.

#### Step 4:

Double check that the Locking Collars at the top are secured and prevent the now loosened pipe from falling through.

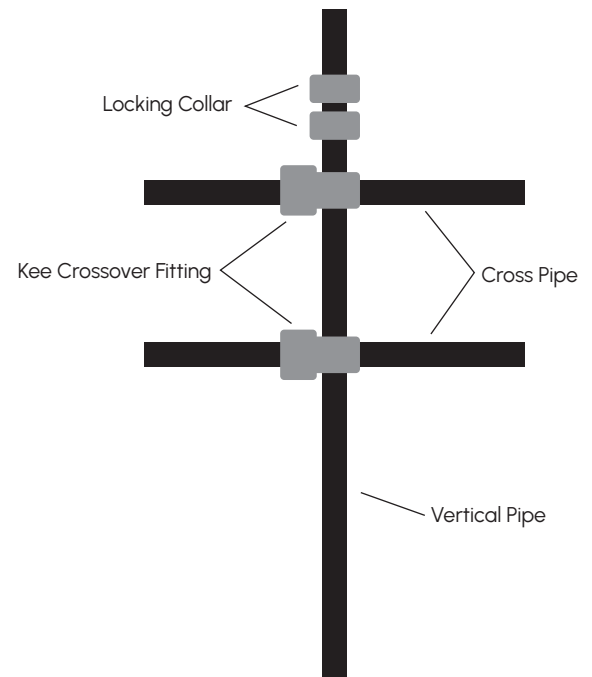

Front View

#### Need help?

Call 1-800-932-3339 or  
Email [info@gymsupply.com](mailto:info@gymsupply.com)